1 -Comp. Loc.: Fuses and Relays

Fuses and relays on relay panel:

- ⇒ “1.1.1 Fuses & relays on Relay Panel, through April 2002”, page 2
- ⇒ “1.1.2 Fuses & relays on Relay Panel, from May 2002”, page 2

Fuses and Relays on thirteenfold auxiliary relay panel above relay panel :

- ⇒ “1.2.1 Fuse & Relay on Thirteenfold Auxiliary Relay Panel, through April 2002”, page 3
- ⇒ “1.2.2 Fuse & Relay on Thirteenfold Auxiliary Relay Panel, from May 2002”, page 4

Fuses and relays on eightfold auxiliary relay panel behind relay panel:

- ⇒ “1.3.1 Fuses & relays on Eightfold Auxiliary Relay Panel, through May 2002”, page 5
- ⇒ “1.3.2 Fuses & relays on Eightfold Auxiliary Relay Panel, from May 2002”, page 6

Fuses and relays in protective housing, in engine compartment, left

- ⇒ “1.4.1 Fuses and relays in engine compartment left, through April 2002”, page 7
- ⇒ “1.4.2 Fuses and relays in engine compartment left, from May 2002”, page 8

Fuse arrangement in fuse panel, behind instrument cluster, left:

- ⇒ “1.8.1 Fuses in fuse panel, through April 2002”, page 11
- ⇒ “1.8.2 Fuses in fuse panel, from May 2002”, page 13

Connector stations:

- ⇒ “1.5 Connector station, in plenum, from 1998”, page 8
- ⇒ “1.6 Connector station A-pillar left, through April 2002”, page 9
- ⇒ “1.7 Connector station A-pillar right, through April 2002”, page 10

1.1 Fuses and relays arrangement on relay panel

- ⇒ “1.1.1 Fuses & relays on Relay Panel, through April 2002”, page 2
- ⇒ “1.1.2 Fuses & relays on Relay Panel, from May 2002”, page 2

Protected by copyright. Copyright by Volkswagen AG.

1.1.1 Fuses & relays on Relay Panel, through April 2002

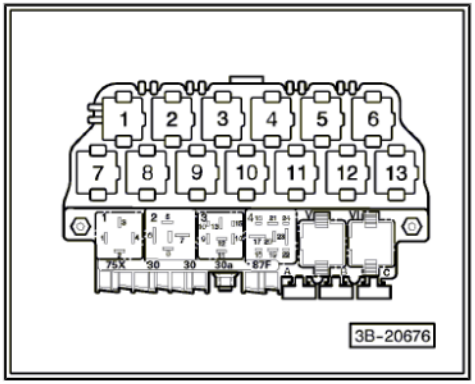

1 - Dual tone horn relay -J4- (204)

2 - Load reduction relay -J59- (213)

3 - Not Used

4 - Fuel pump relay -J17- (208)

V - Wiper intermittent relay -J31- (377)

VI - Wiper intermittent relay -J31- (377)

A - Fuse for socket I in luggage compartment

B - Fuse for socket II in luggage compartment

1.1.2 Fuses & relays on Relay Panel, from May 2002

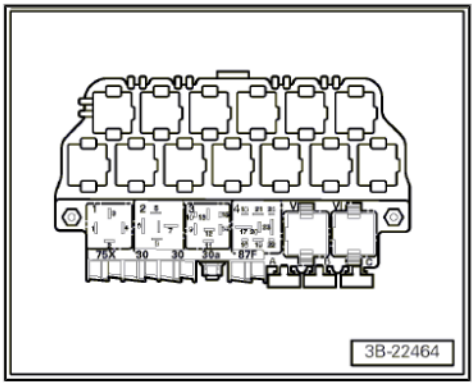

1 - Dual tone horn relay -J4- (53)

2 - Load reduction relay -J59- (370)

3 - Not Used

4 - Fuel pump relay -J17- (372) (409)

V - Wiper intermittent relay -J31- (192)

VI - Wiper intermittent relay -J31- (192)

A - Fuse for socket I in luggage compartment, 20A

B - Fuse for socket II in luggage compartment, 20A

C - Fuse for Taxi, 10A

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

1.2 Fuse & Relay on Thirteenfold Auxiliary Relay Panel

- ⇒ “1.2.1 Fuse & Relay on Thirteenfold Auxiliary Relay Panel, through April 2002”, page 3
- ⇒ “1.2.2 Fuse & Relay on Thirteenfold Auxiliary Relay Panel, from May 2002”, page 4

1.2.1 Fuse & Relay on Thirteenfold Auxiliary Relay Panel, through April 2002

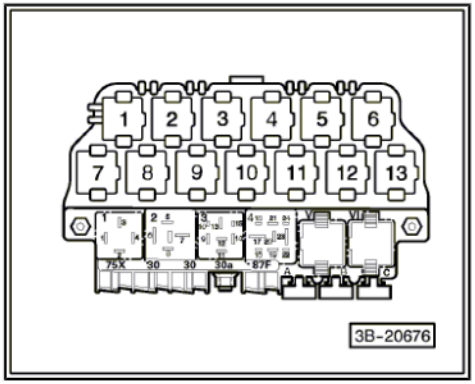

1 - A/C relay -J32- (373)

2 - Rear lid remote unlocking relay -J398- (79)

3 - A/C clutch relay -J44- (267)

4 - A/C clutch control module -J153- (384)

5 - Not Used

6 - Selector lever lamp relay -J307- (205)

7 - Fog lamp relay -J5- (381)

8 - Daytime running lamps change-over relay -J89- (173)

9 - Not Used

10 - Automatic glow time control module -J179- (180)

11 - Radio/telephone speaker change-over relay -J417-

12 - Starter interlock relay -J207- (185)

13 - Park/neutral position relay -J226- (175)

13 - Starter/clutch pedal switch lock relay -J434- (204)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

1.2.2 Fuse & Relay on Thirteenfold Auxiliary Relay Panel, from May 2002

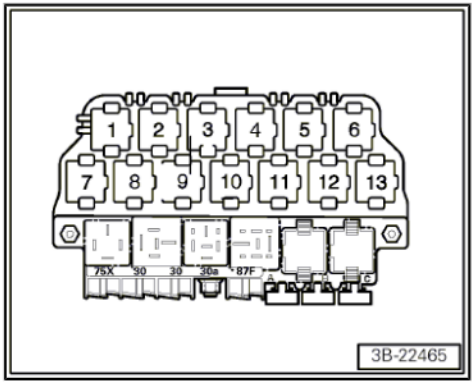

1 - A/C relay -J32- (373)

2 - Power sunroof control module -J245- (79)

3 - A/C clutch control module -J153- (384)

4 - Daytime running lamps change-over relay -J89- (173)

5 - Remote taxi alarm control module -J601-

6 - Selector lever lamp relay -J307-

7 - Fog lamp relay -J5- (381)

8 - Multifunction steering wheel control module -J453- (451) (452)

9 - Multifunction steering wheel control module -J453- (451) (452)

10 - Brake booster control module -J539- (373)

11 - Taxi alarm system control module 2 -J430- (200)

12 - Dual horn auxiliary relay -J733- (53)

13 - Park/neutral position relay -J226- (175)

13 - Starter/clutch pedal switch lock relay -J434- (53)

A - Fuse for Taxi, 25 A

B - Fuse for Taxi, 20 A; High Beam Headlight left, 10 A

C - S131 Fuse for Brake System Vacuum Pump, 15 A

D - Fuse for Power Outlet (12 V) Rear Console, 20 A

E - Fuse for Taxi, 5 A; High Beam Headlight right, 10 A

1.3 Fuses and relays on Eightfold Auxiliary Relay Panel, behind relay panel

- ⇒ "1.3.1 Fuses & relays on Eightfold Auxiliary Relay Panel, through May 2002", page 5
- ⇒ "1.3.2 Fuses & relays on Eightfold Auxiliary Relay Panel, from May 2002", page 6

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

1.3.1 Fuses & relays on Eightfold Auxiliary Relay Panel, through May 2002

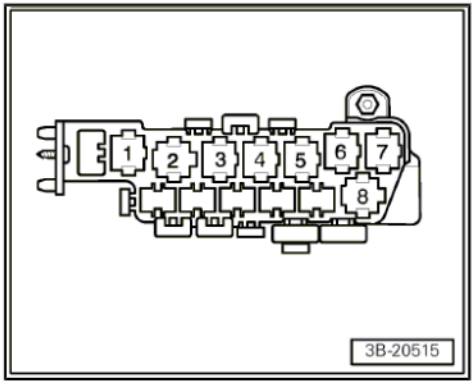

1 - Not Used

2 - Not Used

3 - Not Used

4 - Not Used

5 - Coolant fan control relay -J26- (214), 80W

5 - Coolant fan first or third speed control cut-off relay -J229- (214), 300W

6 - After-run coolant fan control module -J138- (214)

7 - Not Used

8 - Second speed coolant fan control relay -J337- (213), 300W

- - Coolant Fan Fuse 5A

- - Coolant Fan Fuse 30A

- - ABS Hydraulic Pump Fuse 50A

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

1.3.2 Fuses & relays on Eightfold Auxiliary Relay Panel, from May 2002

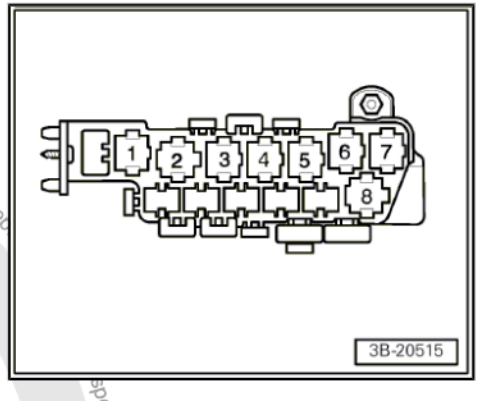

1 - Not Used

2 - Not Used

3 - Coolant fan control relay -J26- 80 W (373)

4 - Not Used

5 - Coolant fan first or third speed control cut-off relay -J229- (373)

6 - Coolant fan control relay -J26- (373)

7 - ABS relay -J102- (373)

8 - Coolant fan control relay -J26- (370)

- - ABS Hydraulic Pump Fuse 30 A

- - Power Window Fuse 30 A

- - Coolant Fan Fuse 30 A, 40 A, 60 A

- - Coolant Fan Fuse 5 A

- - ABS Hydraulic Pump Fuse 30 A, 50 A

- - Power Seat Circuit Breaker - Passengers Seat 30 A

- - Power Seat Circuit Breaker - Drivers Seat 30 A

- - Alarm System with Anti-Theft warning system -Telematic- 30 A

- - Alarm System with Anti-Theft warning system 15 A

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

1.4 Fuses and relays, in engine compartment left

- ⇒ “1.4.1 Fuses and relays in engine compartment left, through April 2002”, page 7
- ⇒ “1.4.2 Fuses and relays in engine compartment left, from May 2002”, page 8

1.4.1 Fuses and relays in engine compartment left, through April 2002

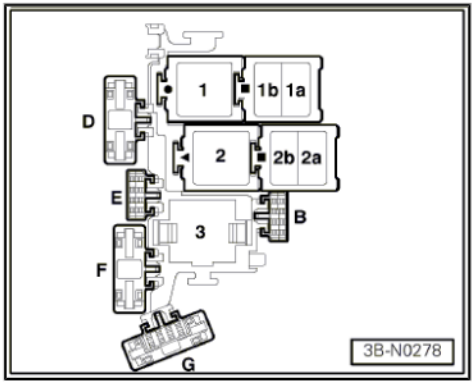

1 - Low heat output relay -J359- (373), for diesel only;

1 - Motronic engine control module power supply relay -J271- (167), engine code BDP

2 - High heat output relay -J360- (370), for diesel only

2 - Secondary air injection pump relay -J299- (373), (100)

3 - Terminal 30 power supply relay -J317- (219)

3 - Motronic engine control module power supply relay -J271- (429)

3 - Auxiliary engine coolant pump relay -J496- (53), (411)

B - Injectors fuse -S116-

B - Fuse for Auxiliary Engine Coolant (EC) Pump 5A

B - Safety fuse 1 -S131- , 15A

D - Secondary air injection pump fuse -S130- , 40 A

D - Glow Plug Fuse - Engine 40 A for diesel only

E - Ignition coil fuse (terminal 15) -S115- , 40A

E - Engine control unit fuse, 5 A for RHD only.

E - Glow Plug Fuse - Engine 40 A for diesel only

F - Engine control module fuse -S102-

F - Coolant 25A, for diesel only 5A

F - Glow plug fuse -S125- , 60A, 80A

G - Engine electronics fuse -S282- , 10A LHD vehicle only

G - Glow Plug -2- Fuse - Coolant 50A for diesel only

G - Heated oxygen sensor circuit breaker -S73- , 10A

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

1.4.2 Fuses and relays in engine compartment left, from May 2002

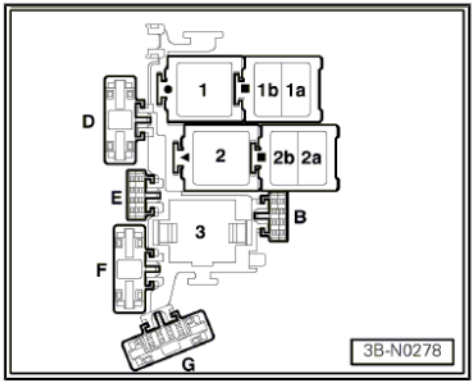

1 - Motronic engine control module power supply relay -J271- (167), engine code BDP

2 - Secondary air injection pump relay -J299- (373), (100)

3 - Motronic engine control module power supply relay -J271- (429), (219)

3 - Auxiliary engine coolant pump relay -J496- (53), (411)

B - Injectors fuse -S116- 10A

B - Auxiliary Engine Coolant (EC) Pump 5A;

B - Safety fuse 1 -S131- 15A

D - Secondary air injection pump fuse -S130- , 50 A

E - Ignition coil fuse (terminal 15) -S115- 40 A

F - Engine control module fuse -S102- , 5 A

G - Heated oxygen sensor circuit breaker -S73- 10A

G - Engine electronics fuse -S282- 10A (LHD vehicle only)

1.5 Connector station, in plenum, from 1998

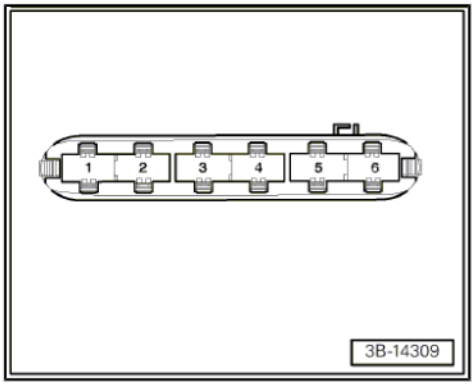

	Color	from wiring harness	to wiring harness
1	black	Instrument Panel	Engine Compartment right
2	brown	Instrument Panel	Engine Compartment right
3	red	Instrument Panel	Engine Compartment right
4	yellow	Instrument Panel	Engine Compartment right

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

	Color	from wiring harness	to wiring harness
5	blue	Instrument Panel	Engine Compartment right
6	white	Instrument Panel	Engine Compartment right

1.6 Connector station A-pillar left, through April 2002

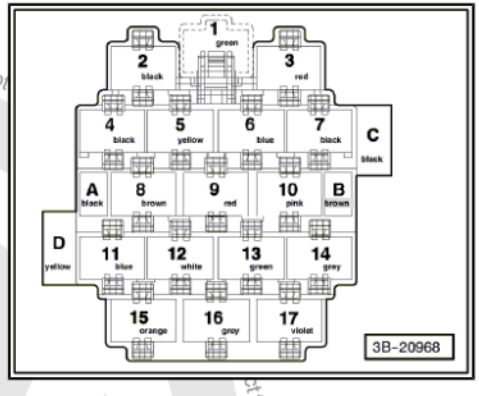

	Color	from wiring harness	to wiring harness
1	Green	Roof	Instrument Panel
2	Black	Floor	Door, left front
3	Red	Floor	Roof
4	Black	Cruise Control	Instrument Panel
5	Yellow	Empty	Empty
6	Blue	Floor	Instrument Panel
7	Black	Speaker	Instrument Panel
8	Brown	Floor	Instrument Panel
9	Red	Headlamp, left	Instrument Panel
10	Pink	Headlamp, left	Instrument Panel
11	Blue	Floor	Instrument Panel
12	White	Floor/Navigation	Instrument Panel
13	Green	Headlamp, left	Instrument Panel
14	Grey	Coolant Fan	Instrument Panel
15	Orange	ABS	Instrument Panel
16	Grey	Floor	Door, left front
17	Violet	Wiper motor	Instrument Panel
A	Black	Roof	Instrument Panel

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

	Color	from wiring harness	to wiring harness
B	Brown	Washer System	Instrument Panel
C	Black	Instrument panel	Outside Air Temp. Display
D	Yellow	Airbag	Instrument Panel

1.7 Connector station A-pillar right, through April 2002

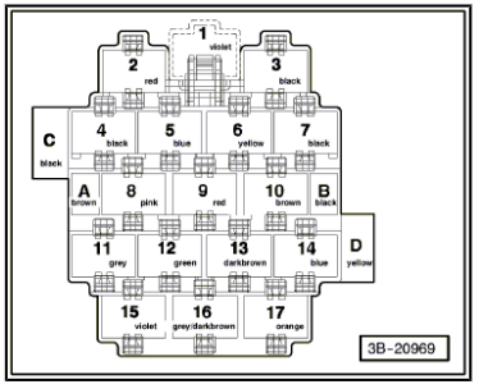

	Color	from wiring harness	to wiring harness
1	Violet	Floor	Instrument Panel
2	Black	CD Changer Unit	Instrument Panel
3	Red	Floor	Door, right front
4	Black	Speaker	Instrument Panel
5	Yellow	Empty	Empty
6	Blue	Empty	Empty
7	Black	Floor / Rear Wisher	Instrument Panel
8	Blue	Headlamp, right	Instrument Panel
9	Yellow	Headlamp, right	Instrument Panel
10	Black	4 Spd. Automatic Transmission	Instrument Panel
11	Pink	ABS	Instrument Panel
12	Red	Airbag / Heated Seats	Instrument Panel
13	Brown	Floor	Instrument Panel
14	Grey	4 Spd. Automatic Transmission	Instrument Panel
15	Green	Daytime Running Light	Instrument Panel
16	Grey / Dark Brown	Floor	Instrument Panel
17	Orange	Telephone	Instrument Panel

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

	Color	from wiring harness	to wiring harness
A	Brown	Airbag	Floor
B	Black	Airbag	Instrument Panel
C	Black	Empty	Empty
D	Yellow	Airbag	Instrument Panel

1.8 Fuses, behind instrument cluster, left

- ⇒ "1.8.1 Fuses in fuse panel, through April 2002", page 11
- ⇒ "1.8.2 Fuses in fuse panel, from May 2002", page 13

1.8.1 Fuses in fuse panel, through April 2002

Note

Fuses beginning from S23 to S44 are identified with additional prefix 2, in wiring diagram. Example: Fuse S40 on fuse panel is listed as S240 in wiring diagram

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 7,5 A - brown
- 5 A - beige
- 3 A - violet

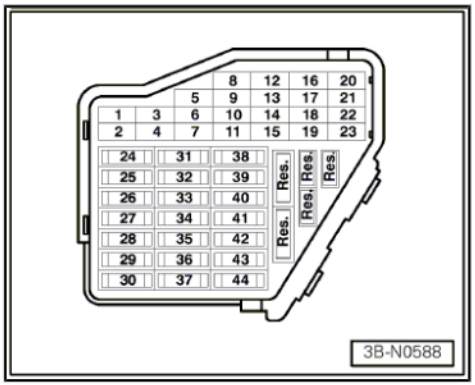

No.		Designation in Wiring Diagram	Nominal Value		Function/Component	Terminal
1	-	Fuse 1 in fuse panel -S1-	5 A	-	Heated washer nozzle	
2	-	Fuse 2 on fuse panel -S2-	10 A	-	Turn signal system	
3	-	Fuse 3 on fuse panel -S3-	5 A	-	Light for glove compartment, air conditioning	

Copyright by Volkswagen AG. Reproduced by permitted only for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document.

No.		Designation in Wiring Diagram	Nominal Value		Function/Component	Terminal
4	-	Fuse 4 on fuse holder -S4-	5 A	-	License plate light	
5	-	Fuse 5 on fuse holder -S5-	10 A	-	Instrument cluster, heated seats, cruise control test plug, air conditioning	
6	-	Fuse 6 on fuse panel -S6-	5 A	-	Comfort module comfort system	
7	-	Fuse 7 on the fuse panel -S7-	10 A	-	ABS	
8	-	Fuse 8 on fuse holder -S8-	5 A	-	Automatic headlight beam adjusting, telephone system	
9	-	Fuse 9 on fuse panel -S9-		-	Not used	
10	-	Fuse 10 on fuse holder -S10-	5 A	-	CD-Changer Unit	
11	-	Fuse 11 on fuse panel -S11-	5 A	-	Cruise control by automatic transmission	
12	-	Fuse 12 on fuse panel -S12-	10 A	-	B+ (battery positive voltage) for on board diagnostic (OBD)	
13	-	Fuse 13 on fuse panel -S13-	10 A	-	Brake lights	
14	-	Fuse 14 on fuse panel -S14-	10 A	-	Comfort module system	
15	-	Fuse 15 on fuse panel -S15-	10 A	-	Instr. cluster, air conditioning, automatic transmission	
16	-	Fuse 16 on fuse panel -S16-		-	Not used	
17	-	Fuse 17 on fuse panel -S17-	10 A	-	Navigation	
18	-	Fuse 18 on fuse holder -S18--	10 A	-	Right headlight, high beam	
19	-	Fuse 19 on fuse panel -S19-	10 A	-	Left headlight, high beam	
20	-	Fuse 20 on fuse panel -S20-	10 A	-	Right headlight, low beam	
21	-	Fuse 21 (on fuse panel) -S21-	10 A	-	Right headlight, low beam	
22	-	Fuse 22 (on fuse panel) -S22-	5 A	-	Park-light, right	
23	-	Fuse 223 on fuse holder -S223-	5 A	-	Park-light, left	
24	-	Fuse 224 on fuse holder B -S224-	25 A	-	Wiper system	
25	-	Fuse 225 on fuse panel B -S225-	30 A	-	Fresh air blower recirculating control	
26	-	Fuse 226 on fuse panel B -S226-	30 A	-	Rear window defogger	
27	-	Fuse 227 on fuse panel B -S227-	15 A	-	Rear window wiper system	
28	-	Fuse 228 on fuse panel B -S228-	15 A	-	Fuel pump (FP)	
29	-	Fuse 229 on fuse panel B -S229-	20 A	-	Engine control	
30	-	Fuse 230 on fuse panel B -S230-	20 A	-	Sunroof	
31	-	Fuse 231 on the fuse panel B -S231-	15 A	-	Back up lights, cruise control	
32	-	Fuse 232 on fuse panel B -S232-	20 A	-	Engine control	
33	-	Fuse 233 on fuse panel B -S233-	15 A	-	Cigarette lighter	
34	-	Fuse 234 on fuse panel B -S234-	15 A	-	Engine control, injectors	

Copyright by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG. Copying or distribution, in whole or in part, is not permitted unless authorised by Volkswagen AG for commercial purposes.

No.		Designation in Wiring Diagram	Nominal Value		Function/Component	Terminal
35	-	Fuse 235 on fuse panel B -S235-	30 A	-	Trailer socket	
36	-	Fuse 236 on fuse panel B -S236-	15 A	-	Fog lights	
37	-	Fuse 237 on fuse panel B -S237-	20 A	-	Radio system	
38	-	Fuse 238 on fuse panel B -S238-	15 A	-	Comfort System	
39	-	Fuse 239 on fuse panel B -S239-	15 A	-	Emergency flasher system	
40	-	Fuse 240 on fuse panel B -S240-	25 A	-	Dual horn	
41	-	Fuse 241 on fuse panel B -S241-		-	Not used	
42	-	Fuse 242 on fuse panel B -S242-		-	Not used	
43	-	Fuse 243 on fuse panel B -S243-		-	Not used	
44	-	Fuse 244 on fuse panel B -S244-	30 A	-	Heated seats	

1.8.2 Fuses in fuse panel, from May 2002

Note

Fuses beginning from S23 to S44 are identified with additional prefix 2, in wiring diagram. Example: Fuse S40 on fuse panel is listed as S240 in wiring diagram

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 7,5 A - brown
- 5 A - beige
- 3 A - violet

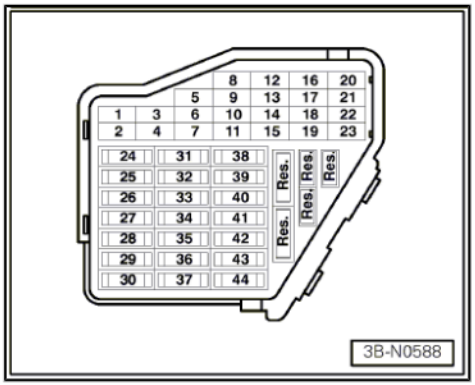

No.		Designation in Wiring Diagram	Nominal Value		Function/Component	Terminal
1	-	Fuse 1 in fuse panel -S1-	5 A	-	Heated washer nozzle	

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

Protected by copyright. Copyright by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG. Reproduction, in part or in whole, is not permitted unless authorized by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

No.		Designation in Wiring Diagram	Nominal Value		Function/Component	Terminal
2		Fuse 2 on fuse panel -S2-	10 A	-	Turn signal system	
3	-	Fuse 3 on fuse panel -S3-		-	Not used	
4	-	Fuse 4 on fuse holder -S4-	5 A	-	License plate light	
5	-	Fuse 5 on fuse holder -S5-	10 A	-	Power Seats, air conditioning, telematic, Multi-Function Steering Wheel, Power sunroof, mirror adjustment, HomeLink	
6	-	Fuse 6 on fuse panel -S6-	5 A	-	Comfort module comfort system	
7	-	Fuse 7 on the fuse panel -S7-	10 A	-	ABS, Cruise Control system, Engine Control Unit	
8	-	Fuse 8 on fuse holder -S8-	5 A	-	Automatic headlight beam adjusting	
9	-	Fuse 9 on fuse panel -S9-	5 A	-	Parking aid	
10	-	Fuse 10 on fuse holder -S10-	5 A	-	CD-Changer Unit, Telematic, Multi-Function Steering Wheel, Navigation, Radio	
11	-	Fuse 11 on fuse panel -S11-	5 A	-	Power Seats with Memory	
12	-	Fuse 12 on fuse panel -S12-	10 A	-	B+ (battery positiv voltage) for on board diagnostic (OBD)	
13	-	Fuse 13 on fuse panel -S13-	10 A	-	Brake lights	
14	-	Fuse 14 on fuse panel -S14-	10 A	-	Comfort module system	
15	-	Fuse 15 on fuse panel -S15-	10 A	-	Instr. cluster, air conditioning, automatic transmission	
16	-	Fuse 16 on fuse panel -S16-	5 A	-	ABS, Steering Angle Sensor	
17	-	Fuse 17 on fuse panel -S17-	10A /15A	-	power outlet, Telematic	
18	-	Fuse 18 on fuse holder -S18--	10 A	-	Right headlight, high beam	
19	-	Fuse 19 on fuse panel -S19-	10 A	-	Left headlight, high beam	
20	-	Fuse 20 on fuse panel -S20-	15 A	-	Right headlight, low beam	
21	-	Fuse 21 (on fuse panel) -S21-	15 A	-	Left headlight, low beam	
22	-	Fuse 22 (on fuse panel) -S22-	5 A	-	Parklight, right	
23	-	Fuse 223 on fuse holder -S223-	5 A	-	Parklight, left	
24	-	Fuse 224 on fuse holder B -S224-	25 A	-	Wiper system	
25	-	Fuse 225 on fuse panel B -S225-	30 A	-	Fresh air blower, recirculating control, air conditioning, Power sunroof	
26	-	Fuse 226 on fuse panel B -S226-	30A	-	Rear window defogger	
27	-	Fuse 227 on fuse panel B -S227-	15 A	-	Rear window wiper system	
28	-	Fuse 228 on fuse panel B -S228-	20 A	-	Fuel pump (FP)	
29	-	Fuse 229 on fuse panel B -S229-	20 A	-	Engine Control Unit, Coolant Fan	
30	-	Fuse 230 on fuse panel B -S230-	20 A	-	Sunroof	

No.		Designation in Wiring Diagram	Nominal Value		Function/Component	Terminal
31	-	Fuse 231 on the fuse panel B -S231-	15 A	-	Back-up lights, cruise control system, automatic transmission, Mirror adjustments, diagnostic	
32	-	Fuse 232 on fuse panel B -S232-	20 A	-	Engine Control Unit, cruise control system	
33	-	Fuse 233 on fuse panel B -S233-	15A	-	Cigarette lighter	
34	-	Fuse 234 on fuse panel B -S234-	15A	-	Engine Control Unit, injectors	
35	-	Fuse 235 on fuse panel B -S235-	30A	-	Trailer socket	
36	-	Fuse 236 on fuse panel B -S236-	15A	-	Fog lights	
37	-	Fuse 237 on fuse panel B -S237-	20A	-	Radio system, Navigation	
38	-	Fuse 238 on fuse panel B -S238-	15A	-	Comfort module system	
39	-	Fuse 239 on fuse panel B -S239-	15A	-	Emergency flasher system	
40	-	Fuse 240 on fuse panel B -S240-	25A	-	Dual horn	
41	-	Fuse 241 on fuse panel B -S241-	25A	-	Telematic	
42	-	Fuse 242 on fuse panel B -S242-	25A	-	ABS	
43	-	Fuse 243 on fuse panel B -S243-	15A	-	Engine Control Unit	
44	-	Fuse 244 on fuse panel B -S244-	30A	-	Heated seats	

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.